

BREWVIE
INSTALLATION MANUAL




1. DIMENSION AND POSITIONING

- MACHINE SIZE : W 200 mm X L 440 mm X H 325 mm
- OPERATING(HOLE)SIZE : W 170 mm X L 410 mm X D 400 mm
- WEIGHT : ABOUT 10kg
- SCALE : Max 1kg
- VOLTAGE AND POWER CONSUMPTION : AC 220v, 2,650w

MACHINE SIZE




BREWVIE OPERATING PLAN

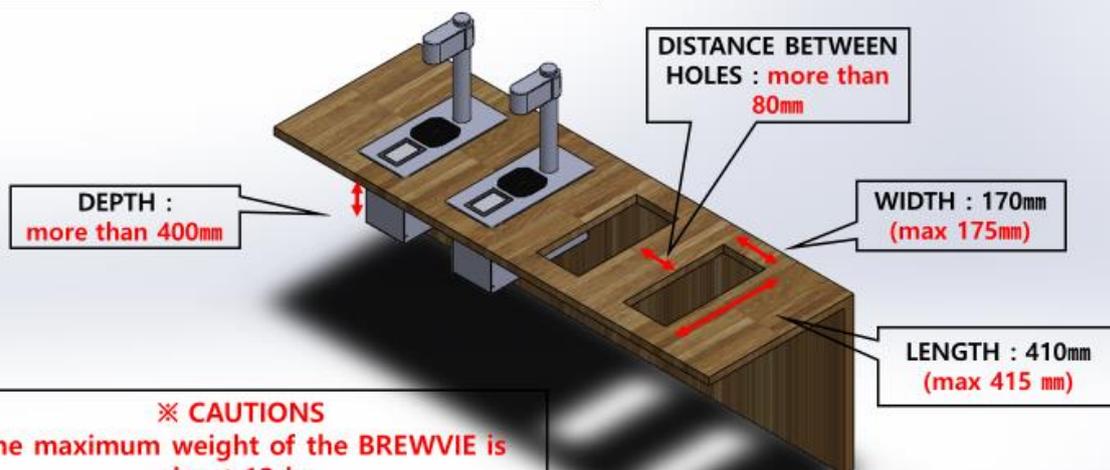

※ CAUTIONS

The maximum weight of the BREWVIE is about 12 kg.
Reinforcement may be required depending on the material of the bar top plate


2. WATER CONNECTION

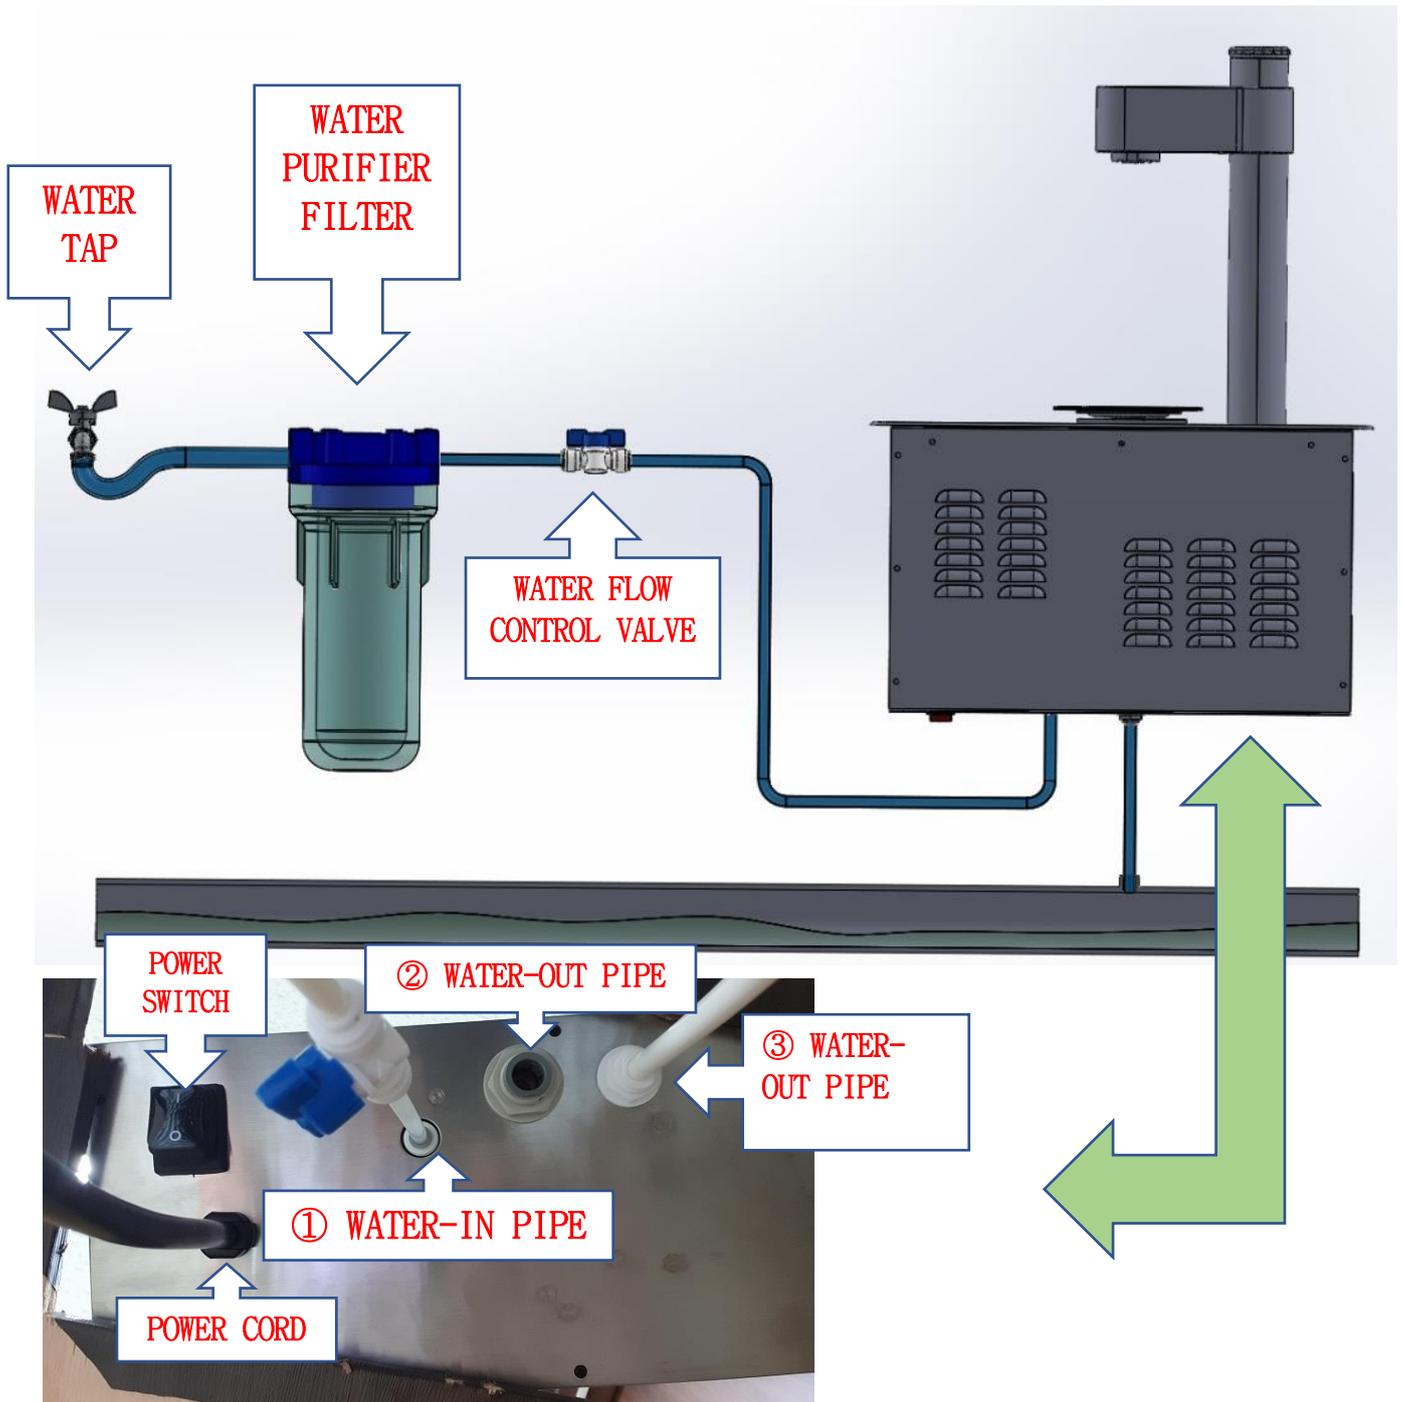


WATER PURIFIER FILTER AND WATER FLOW CONTROL VALVE ARE RECOMMENDED FOR BETTER PERFORMANCE

- ① WATER-IN PIPE : Using the flexible hose(1/4") provided with the machine
- ② WATER-OUT PIPE : Using 1/2" flexible hose. End of hose should not be sunk into water.(Water can flow backward)
- ③ STEAM-OUT PIPE : Using 1/4" flexible hose. End of hose should not be sunk into water.(Water can flow backward)
- ④ Connect the plug to a separate earthed wall socket.


How to connect water hose

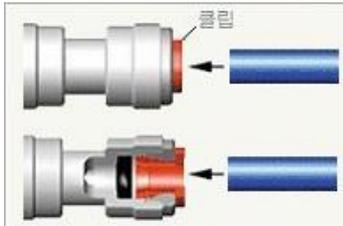

Insert the tube into the insertion slot with the fitting clip.

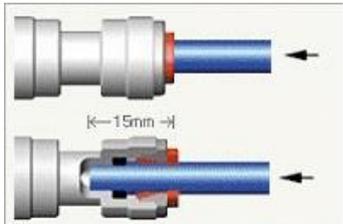

Push the tube all the way into the fitting to finish the tightening.

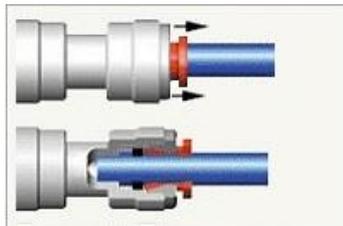

After tightening, pull both fittings and tubes to check if the tube does not come off. At this time, the clip will come out slightly as shown in the figure and will hold the tube so that it will not come off.



WATER FLOW CONTROL VALVE (PROVIDED WITH THE MACHINE)
TUBE SIZE : 1/4" (Inch) OUT DIAMETER
Install between water filter and BREWVIE



flexible hose
1/4" (Inch) OUT DIAMETER
Install between Water filter and flow control valve. on water-out pipe

3. WATER FLOW CHECKING

RECOMMENDED FLOW RATE


600 ~ 700 g / min

- ① Press any place for 3 seconds at HOME screen.
- ② Empty the water inside the tank with DRAIN menu.
- ③ Screen changed to Setting page. Press ① location for three seconds.
- ④ Flow rate is automatically measured. Use the flow control valve to adjust to the recommended flow rate. If the maximum flow rate is less than the recommended, please use a pressurized pump.


HOME screen



Setting page

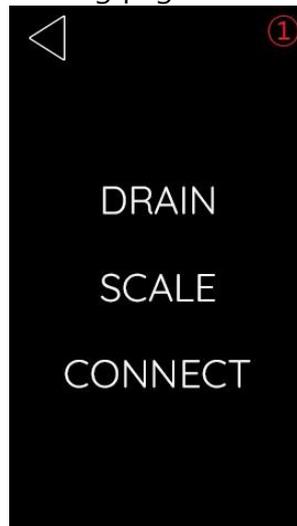

Factory mode

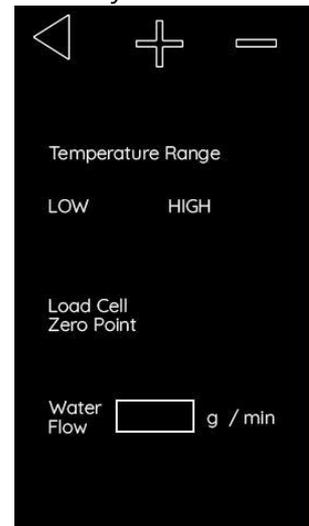

4. Scale function

HOME screen




Setting page



SCALE



Factory mode

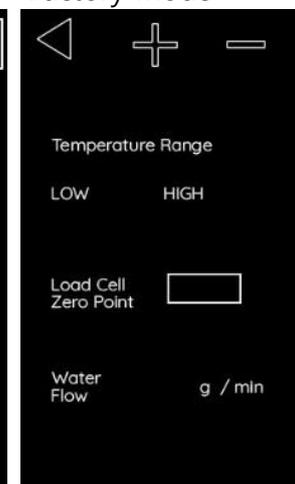

- ① Press any place for 2 seconds at HOME screen.
- ② Press SCALE to use SCALE function.
- ③ The scale can measure from 0 to 999g.

4 - 1) Set the scale to zero

- ① Measure the weight of the scale calibration weight. if any error occurs, remove the scale calibration weight come back to setting page. press ① for 3 seconds to move to Factory mode.
- ② If measured weight is less than the scale calibration weight, please press - button. + button is for the case measured weight is over than the scale calibration weight.
When press +,- button, scale setting changes 0.1g~0.2g.
- ③ After set Zero Point setting, measure the weight of the scale calibration weight again. When setting is finished, remove the weight and press ② CAL button for three seconds. "101" displays and setting is saved.

※ Precautions during installing

- * Strong vibration or shock may cause the product to malfunction. Please handle with care.
- * Power switch, water-in&out connections and power cords are located on the bottom of BREWVIE. Please be careful not to damage these parts when installing BREWVIE.
- * Please be careful not to change the water-in and water-out connections.
- * If you press the scale with strong force, it may cause damage. Please handle with care.
- * There are protect tapes on Top plate of BREWVIE, Touch panel, and Scale. Please remove if needed.